

## Installation Instructions for PVX30B FloGripp Knob Assembly Kit

The FloGripp Knob Assembly Kit consists of:


- 1 each Black Aluminum Knob
- 2 each Dog Point Set Screws
- 2 each Flat Point Set Screws
- 1 each Plastic Washer
- 1 each 1/16" Allen Wrench
- 1 each Tube Loctite® Thread Locker

Step 1) If your post valve has a swivel handle, it must be removed. To remove the swivel, tap the spring pin out using a hammer and a 1/8" pin punch or other suitable tool. Discard the swivel and pin.

Step 2) Apply a drop of Loctite® Thread Locker to each of the set screws.

Step 3) Place the plastic washer over the stem of the post valve, then slip the Knob onto the stem of the post valve. Check that the threaded hole of the knob line up with the hole in the valve stem.

Step 4) Install the two Dog Point set screws. It is important to align the dog points with the hole in the post valve stem and to tighten the screws such that the knob is centered. If the dog points do not enter the holes, the knob could slip off.

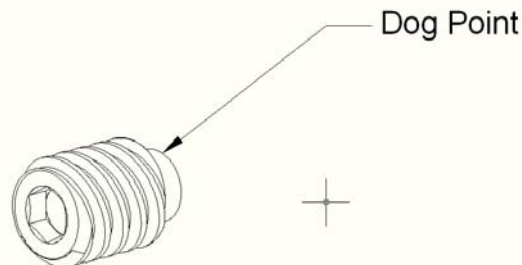

Step 5) Install the two Flat Point set screws. It is important to assemble the dog point set screws first. The Flat Point Set Screws are for locking the Dog Point Set Screws. Check the assembly for smooth operation, no wobble when turned and no movement of the knob on the stem when operated.

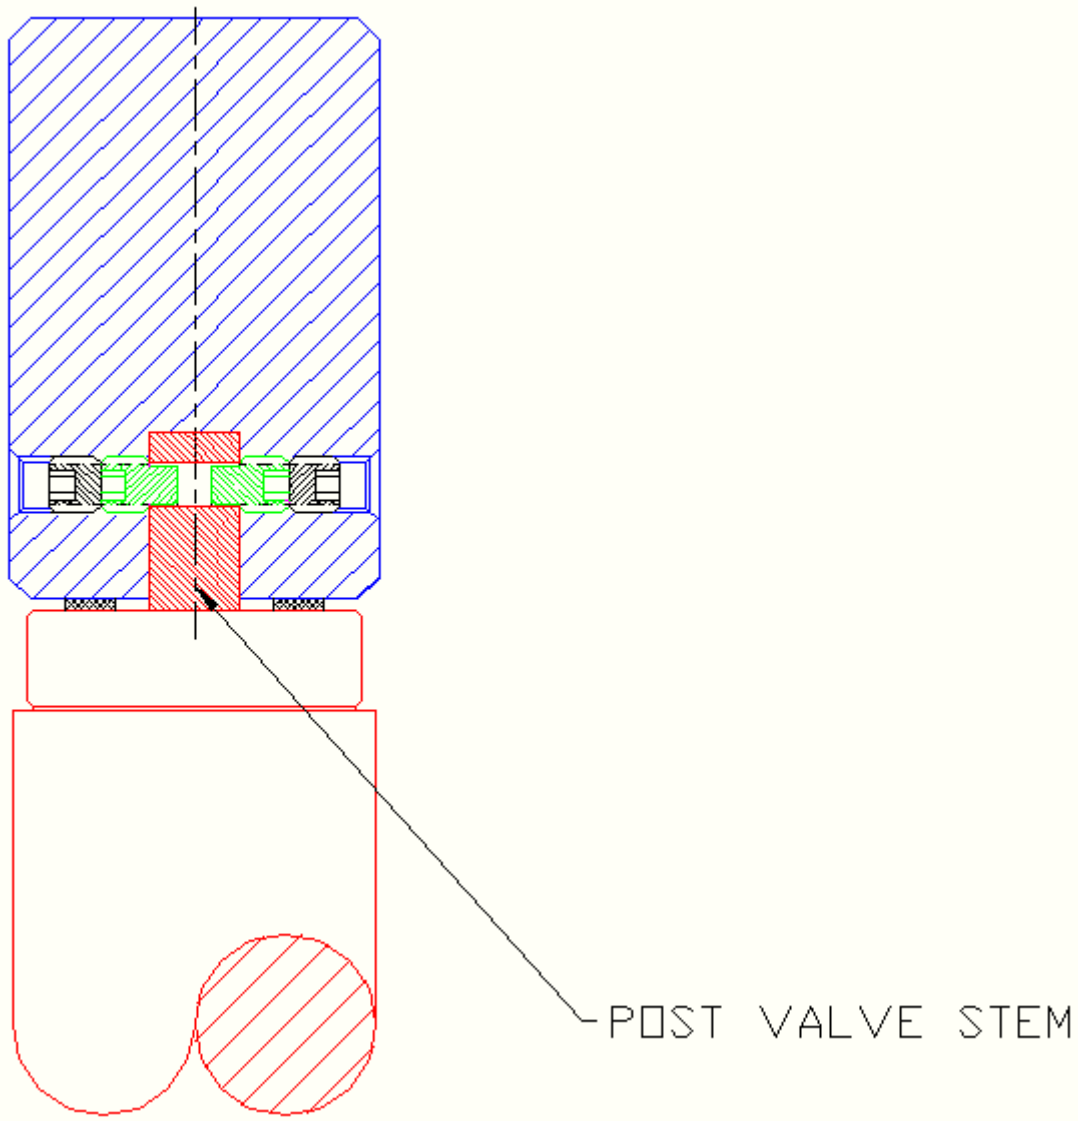


Fig. 1