



Fill Pot, Oxygen Cylinder


- Water Tight Tread Plate Aluminum Shell,
- 1/2" Solid 6061-T6511 Extruded Tube welded to removable support plate, Tube has through holes for water transfer
- Fits Aluminum Cylinder Sizes D & E

Ordering Information:

TCS-FP1

Single Cylinder Fill Pot

Call for Pricing

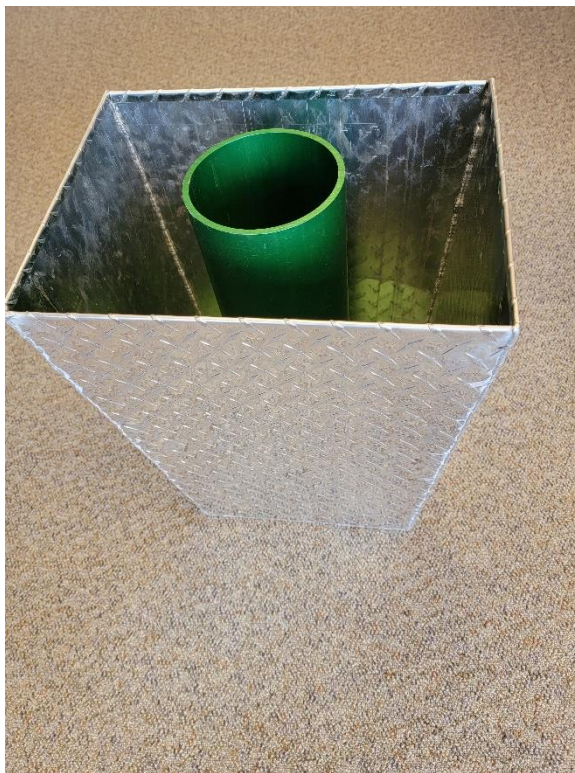

Flotec's Oxygen Cylinder Fill Pot provides for a vertically directed release of high-pressure gas in the event of cylinder rupture during cascade transfilling. Manufactured from the highest quality materials, our fill pots employ a solid water jacket barrier between the inner cylinder shell and outer casing.